


MAGMA

CTRL CASE

For perfect protection of the jog wheels, faders and knobs we recommend to use the included foam pads.

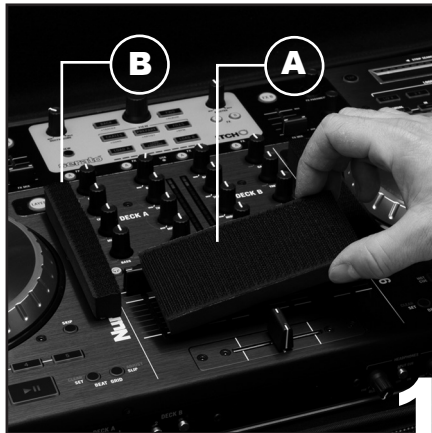

1 Place foam (A) between the cross and line faders. Place the both oblong pads (B) on the upper edge of the controller or between the jog wheels and the EQ knobs. Make sure that the pads only touch the face plate and no buttons.



2 For smaller controllers you can also use both foams (C) for additional side padding



3 Close the lid now.



4 All foams will stick to the lid (velcro) and will remain in fixed position.



NI S4



Denon MC-6000



Numark NS-6



Pioneer DDJ-ERGO